## Parent Category: Digital Cinema Player Category: Hotfixes

## Password Manager dialogue box at every boot

Created on Thursday, 14 August 2014 15:56

The following describes how to fix the issue of the "**Password Manager**" dialogue box popping up at every boot.

This could occur on the DCP-2000/ShowVault when a backup file is restored from SW 2.2.5 or 2.4.x to 2.6.x.

Please see below an example screen-shot of the "Password Manager" dialogue box pop up:

😤 Password Manager - Doremi Cinema 📃 🗆 🗙					
	The current password for the <b>doremi</b> account is the system's default password. This password must be changed as soon as possible to minimize security risks. A good password must contain at least eight alphanumeric characters. Because passwords are case sensitive, please remember when you use lower or upper case for letters in your password. In order to change the password of another user's account, you must be logged in with				
_User—	administrator privileges and run the Pass	word Manager.			
Userna	me:	doremi	-		
Passwords					
Old Password					
New password					
Retype	new password				
Don't	askagain				

Please follow the steps below to fix this issue:

**1.** At the end of the server boot process, and the "Password Manager" dialogue box is shown, click on "**Don't ask again**"

2 Pass	sword Manager - Doremi Cin	ema 🔤 🗆 🗙			
	The current password for the <b>doremi</b> account is the system's default password. This password must be changed as soon as possible to minimize security risks.				
	A good password must contain at least eight alphanumeric characters. Because passwords are case sensitive, please remember when you use lower or upper case for letters in your password.				
	In order to change the password of another user's account, you must be logged in with administrator privileges and run the <b>Password Manager</b> .				
-User-					
Username:		doremi			
-Passv	words				
Old Password					
New password					
New p	assword				
	assword e new password				

2. Then open a terminal window and login as root (su/root password).



📃 xterm	
doremi@Alex's_DO Password: Alex's_DCP:~#	P:~\$ su -

- 3. The run the following command lines shown below and reboot the server.
- #> chmod 04755 /doremi/X11R6/bin/drmpasswd.out <enter>
- #> reboot <enter>



4. After the server has been rebooted, the "Password Manager" dialogue box should not appear any more.

This issue will be fixed in the next SW release.

Last Updated on Monday, 15 September 2014 09:28