

# Film-Tech

The information contained in this Adobe Acrobat pdf file is provided at your own risk and good judgment.

These manuals are designed to facilitate the exchange of information related to cinema projection and film handling, with no warranties nor obligations from the authors, for qualified field service engineers.

If you are not a qualified technician, please make no adjustments to anything you may read about in these Adobe manual downloads.

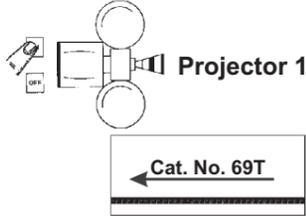
[www.film-tech.com](http://www.film-tech.com)

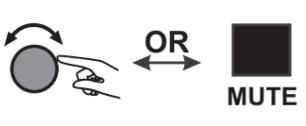
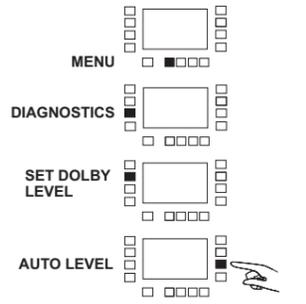
# CP500 OPERATING INSTRUCTIONS FOR THE PROJECTIONIST

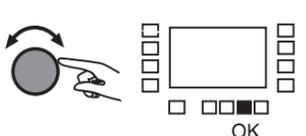
## Dolby Level Adjustment

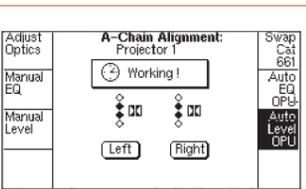
Regularly check Dolby Level adjustment to compensate for aging exciter lamps. If the exciter lamp is changed, readjust Dolby Level.

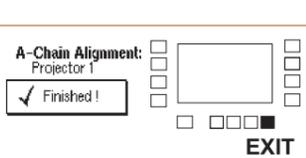
- Clean the sound optics on **Projector 1**, then thread and play the Dolby Tone test film, Cat. No. 69T. Check that the film is running in the direction of the arrow on the film.

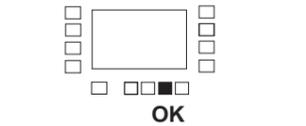

- Turn down the **MAIN FADER** or press **MUTE**.

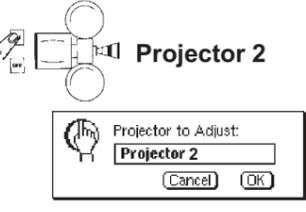

- Press **MENU**
  - Press **Diagnostics**
  - Press **Set Dolby Level**
  - Press **Auto Level**
- Turn the **MAIN FADER** to choose **Projector 1**. Press **OK**.


- The CP500 automatically calibrates to the left and right channels while the Dolby Tone test film is running. (Calibration takes approximately 30 seconds.)


- Press **EXIT** when the screen reports calibration finished.


- Press **OK** to save the new level calibration settings in CP500 memory.


- Repeat the steps, selecting **Projector 2** if you have a second projector. It is not necessary to change any of the other settings in the **Set Dolby Level** menu.



For more information on operating the CP500, refer to the **CP500 Users' Manual**.

**FRONT PANEL DISPLAY**  
Displays Format and Menu screens.

**SOFT KEYS 1-8**  
Select the function shown next to the key in the Front Panel Display.

**BYPASS INDICATOR**  
Indicates continuous red when unit is in Bypass mode.

**MUTE ON INDICATOR**  
Flashes when mute is activated.

**FORMATS KEY**  
Returns the display to the CURRENT FORMAT screen at any time. Use this screen to select formats.

**MENU KEY**  
Returns the display to the first software menu.

**CANCEL KEY**  
Cancels pop-up menu operation (menu box that appears on the display during set up). It also restores previous menu or data.

**OK KEY**  
Selects option currently in pop-up menu. It also stores currently displayed data.

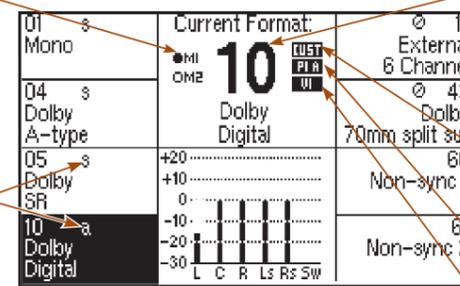
**EXIT KEY**  
Selects the previous menu.

**MUTE KEY**  
Mutes sound output to all channels.

**M1 and M2 INDICATORS**  
Display which projector motor is running (or reflects motor-start jumper position). In Format 10, an indication of "MI" means the system has reverted to the analog track on a Dolby Digital film.

**AUTO DIGITAL INDICATORS**  
Indicate which formats can use Auto Digital. The "s" marks the source or format that can automatically switch to Dolby Digital. The "a" signifies the auto digital destination.

### FRONT PANEL DISPLAY



**Note:** For the processor to function properly, CURRENT FORMAT must be displayed. Any screen other than CURRENT FORMAT disables the remote automation functions. Press the **FORMATS** key.

**CURRENT FORMAT**  
Displays which format is active. If Auto Digital is enabled, Format 10 is automatically selected when digital data arrives. If Format 10 is manually selected when there is no digital data, the unit defaults to Format 05.

**CUST INDICATOR**  
Indicates that Custom Format screen is selected. (See the manual for Custom Format information.)

**PROJECTOR INDICATOR**  
Displays which projector is active with a "P1" or "P2." Displays "A" if Auto Digital is enabled.

**DIGITAL READER INDICATOR**  
Displays which digital soundhead is active with a "V1" or "V2."

**FADER LEVEL DISPLAY**  
Displays one of the following:  
 ■ "0" to "10": for fader setting  
 ■ "- -": for data entry mode  
 ■ "AU": for an active auditorium fader

**MAIN FADER/MULTI-FUNCTION CONTROL**  
Controls sound level or selects data in menu operations.

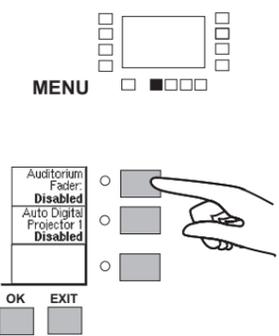
## Auto Digital Setup

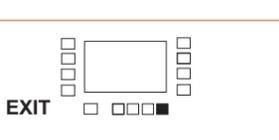
The CP500 can automatically switch to the Dolby Digital format when the soundhead "sees" data on the film.

**To enable or disable Auto Digital:**

- Press **MENU**
  - Press **Auto Digital Projector 1**
  - Pressing the key alternately enables and disables the auto digital feature.

**Note:** When using the Custom Format screen, you can choose between "Projector 1" or "Projector 2."


- Press **EXIT** to return to the CURRENT FORMAT screen.



**Note:** Dolby Digital is not automatically selected when a non-film format (non-sync) is playing.

## CP500 Bypass Operation

The CP500 has a separate power supply and a complete signal path from the projector to the power amps for emergency operation.

To force the unit into bypass, do **ONE** of the following:

- Cut the main power to the processor.
- Press the power/bypass button behind the front panel.

Mono optical sound is played to all three front speakers during bypass operation.

**Note:** It is essential to connect the bypass supply transformer to an AC mains source different from the main power cable. This ensures that power to the bypass supply will not be cut if the main circuit breaker trips.

## Other CP500 Adjustments

Internal adjustments should only be made by a qualified service engineer with specialized test equipment. This is necessary during initial installation or if other sound reproduction equipment (loudspeakers or power amplifiers) is changed.

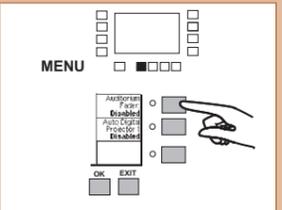
If your CP500 is in need of service, call your local service engineer.

## Audio Problems?

- Check that the exciter lamp or LED in soundhead is on. **WARNING:** Do not stare into the LED beam.
- Check that AC power is getting to the power amps. Look for power indicators on the power amps.
- Check each display and indicator on the front panel:
  - CURRENT FORMAT screen is visible.
  - Correct format is selected. (If Format 01, 04, 05, or 10 is **not** selected, film sound will not be heard.)
  - PROJECTOR INDICATOR matches the active projector.
  - MUTE ON INDICATOR is off (not flashing).
  - FADER LEVEL DISPLAY is in normal range.

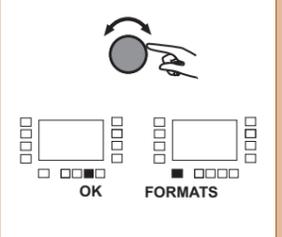
If the FADER LEVEL DISPLAY reads "AU", the auditorium fader is in control. It may have been turned down, unplugged, or damaged.

**To return control to the MAIN FADER:**

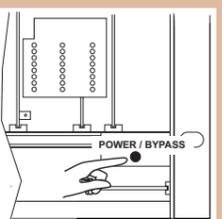
- Press **MENU**
  - Press **Auditorium Fader**
- Rotate the **MAIN FADER** to "Deselect".

Press **OK**, then the **FORMATS** key.

Adjust the **MAIN FADER** to the normal range, if necessary.



- Set the processor to **Bypass mode** if the sound does not return. Open the front panel, and press the small black button at the lower right hand side, labeled, "Power/Bypass." The CP500 **BYPASS INDICATOR** illuminates and sound should return.



LOCAL SERVICE PHONE:

IN THE UNITED STATES:  
 DOLBY LABORATORIES' EMERGENCY 24-HOUR  
 PHONE NUMBER: San Francisco 415-558-0200

Dolby Laboratories  
 U.S.A. 100 Potrero Avenue, San Francisco, CA 94103  
 Telephone (415) 558-0200 Fax (415) 863-1373  
 U.K. Wootton Bassett, Wiltshire SN4 8QJ  
 Telephone (44) 1793-842100 Fax (44) 1793 842101  
<http://www.dolby.com>  
 Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.  
 © Dolby Laboratories 597/11784 Part Number 91477

