

# Film-Tech


The information contained in this Adobe Acrobat pdf file is provided at your own risk and good judgment.

These manuals are designed to facilitate the exchange of information related to cinema projection and film handling, with no warranties nor obligations from the authors, for qualified field service engineers.

If you are not a qualified technician, please make no adjustments to anything you may read about in these Adobe manual downloads.

[www.film-tech.com](http://www.film-tech.com)

# CP65 OPERATING INSTRUCTIONS FOR THE PROJECTIONIST

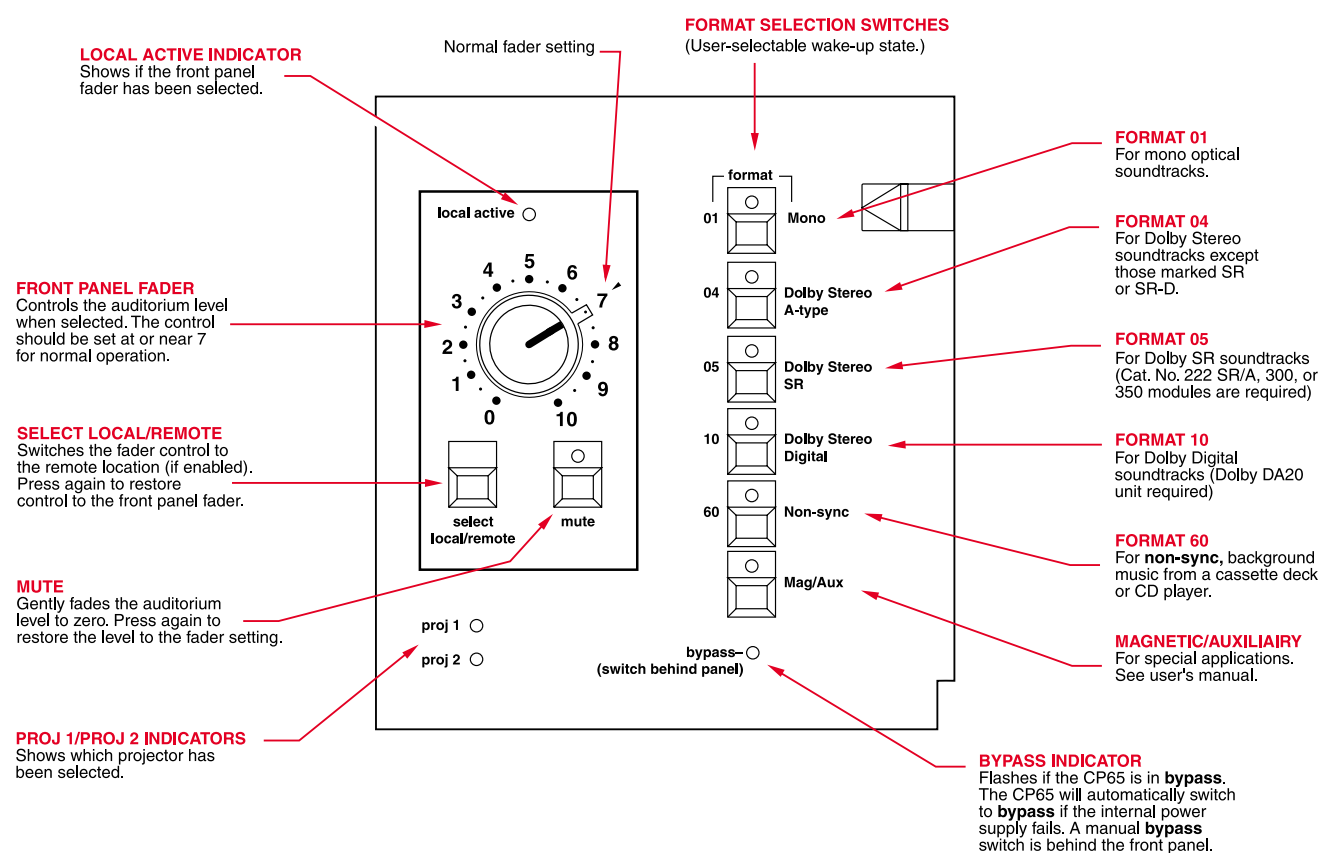


## CP65 Basic Operation

1. Turn on the sound system. The CP65 will normally be set during installation to select an appropriate format and fader when switched on.
2. If no background music is selected, it is usually a good practice to cut off the sound by pressing the mute button. This will prevent projector start-up noise from reaching the auditorium.
3. Before starting the show, double-check the following: Correct format selection, fader position, and projector selection. Switch the mute off at the appropriate moment by pressing the mute button again.

## How to tell a stereo print from a mono print


A Dolby Stereo print should be identified as such on both the film can and leader. However, with time the identifications may be lost. If you are not sure whether you have a stereo print, play a reel and find a stretch of music without dialogue or narration (on the latter, a stereo print looks much like a mono print). Examine the soundtracks closely; the two tracks on a stereo print will be different from each other. On a mono print, the two tracks will be identical. If it is impossible to tell from visual inspection if a stereo film is Dolby SR encoded. If you suspect that a print is Dolby SR encoded but it is not marked in any way, check with the film's distributor. If you are not able to check it is usually safest to play the print in Format 04.

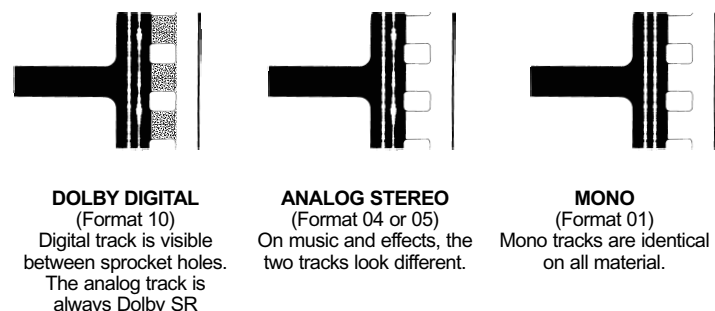

## Dolby Level Adjustment

Occasionally, it is necessary to re-adjust the Dolby level. This is a simple procedure that can easily be done by the projectionist. It is a good practice to occasionally re-check these adjustments to compensate for changes in the soundhead.


To adjust the Dolby level, run a loop of Dolby Cat. No. 69T test film. Make sure it is correctly threaded, with the emulsion side facing away from the screen. Select Format 01 (MONO). Look at the LED Dolby level indicators on the Cat. No. 222 SR/A card. (Refer to the drawing inside the front panel for location.) Adjust the left and right gain controls on the Cat. No. 240A card until the two green indicators on the corresponding Cat. No. 222 SR/A meter are equally lit. Do not adjust the HF controls. If another projector is present, repeat the procedure.

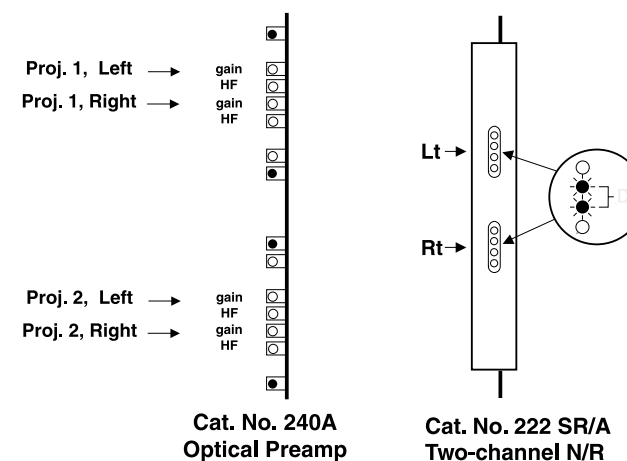

## Dolby Level Controls

NOTE: **Do not** adjust the HF controls without proper test equipment.

Cat. No. 69T  
Dolby Tone Test Film  
Always thread film with emulsion away from the screen.

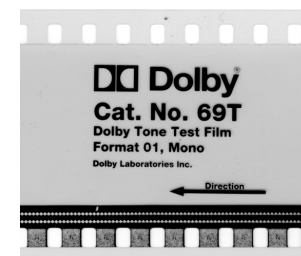


## In Case of Difficulty

If the sound system should fail to operate, immediately check the following:

1. Check that the exciter lamp in the projector is on.
2. Check that AC power is getting to both the CP65 and power amplifiers. (Look for the "power on" indicators on the power amps.) If the bypass indicator on the CP65 is flashing, read the section on CP65 bypass operation (below).
3. Check that the CP65 is switched to the correct format and projector. (Look at the format and projector indicators on the CP65 front panel.)
4. Check that the correct fader is selected and is at the correct level. (Look at the local active LED and fader knob position.)
5. Check that the CP65 mute is switched off.
6. Check for an improper external switch position, such as a speaker selection switch.

## Keep the Soundhead Optics Clean

Regular cleaning of the projectors' soundhead optics will help you keep your theatre sounding at its best. Use compressed air to blow dust from the lens surface and the LED illuminator. If oil with/without dirt is present, use approved glass cleaner (not lens cleaner) and a cotton swab to clean those surfaces. Be sure to shut off the LED before you clean it with any liquid.

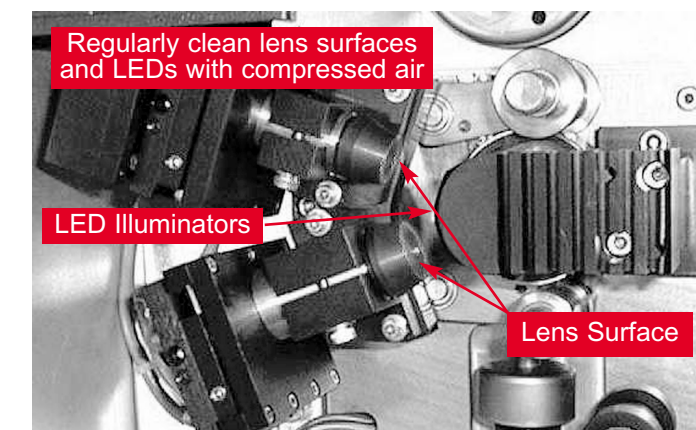

## Other CP65 Adjustments

For optimum performance, other adjustments inside the CP65 should only be made by a qualified service engineer with specialized test equipment. This is usually only necessary during the initial installation, or if other sound reproduction equipment, such as loudspeakers or power amplifiers, are changed. If you feel your CP65 is in need of service, call your local service engineer.

## CP65 Bypass Operation

The CP65 contains a bypass which connects to an independent line amplifier and power supply for emergency operation. The CP65 will automatically switch to bypass in the event of a power supply failure. Other problems, such as distorted sound or loss of a channel, will require the CP65 to be switched into bypass manually. The bypass switch is located behind the front panel. Bypass operation should allow you to complete the show with acceptable sound in mono until further troubleshooting can be done. Note that the CP65 will operate only in optical and magnetic modes when in bypass.

If the CP65 has automatically switched into bypass, there are several things the projectionist can check before calling the service engineer: Check the main power fuse on the transformer block and replace with the spare if necessary. Dolby Laboratories recommends the purchase of an extra Cat. No. 249A (power supply regulator card) for emergencies. Replace the Cat. No. 249A with the spare card, if available. (Shut off AC power to the system before removing the Cat. No. 249A.) If you are unable to restore the sound system to normal operation, call your local service engineer.

LOCAL SERVICE ORGANIZATION:  
Telephone:

IN THE UNITED STATES:  
Dolby Laboratories Emergency 24-hour telephone number:  
415-554-8537



Dolby Laboratories Inc 100 Potrero Avenue, San Francisco, CA 94103-4813  
Telephone 415-558-0200 Fax 415-863-1373  
Wootton Bassett, Wiltshire, SN4 8QJ, England Telephone (44) 1793-842100  
Fax (44) 1793-842101 www.dolby.com  
Dolby and the double-D symbol are trademarks of Dolby Laboratories  
©1999 Dolby Laboratories Inc. S99/9252/12785 Part No. 91241 Iss. 02