


# FILM-TECH

**THE INFORMATION CONTAINED IN THIS ADOBE ACROBAT PDF FILE IS PROVIDED AT YOUR OWN RISK AND GOOD JUDGMENT.**

**THESE MANUALS ARE DESIGNED TO FACILITATE THE EXCHANGE OF INFORMATION RELATED TO CINEMA PROJECTION AND FILM HANDLING, WITH NO WARRANTIES NOR OBLIGATIONS FROM THE AUTHORS, FOR QUALIFIED FIELD SERVICE ENGINEERS.**

**IF YOU ARE NOT A QUALIFIED TECHNICIAN, PLEASE MAKE NO ADJUSTMENTS TO ANYTHING YOU MAY READ ABOUT IN THESE ADOBE MANUAL DOWNLOADS.**

[WWW.FILM-TECH.COM](http://WWW.FILM-TECH.COM)

	TITLE <b>Changing a D741 (DSP) board in a DTS-6AD/-ECP</b>		NUMBER <b>TN-E716</b>	REV 	Page 1 of 1
	DATE PREPARED May 20, 2003	CREATED BY: K. Hultgren	EFFECTIVE DATE 	APPROVED BY: MB Smith	

DTS, 5171 Clareton Dr., Agoura Hills, CA 91301


Contact Customer Service for the latest revision.

This procedure explains what steps need to be taken when replacing a D741 DSP board in the DTS-6AD and DTS-ECP cinema processors.

**You will not need any equipment**

**Procedure**

1. Power off the DTS-6AD or DTS-ECP cinema processor.
2. Lift off the front display. Carefully remove the ribbon cables from the front display. Take out the old D741 (middle) board and install the new one.

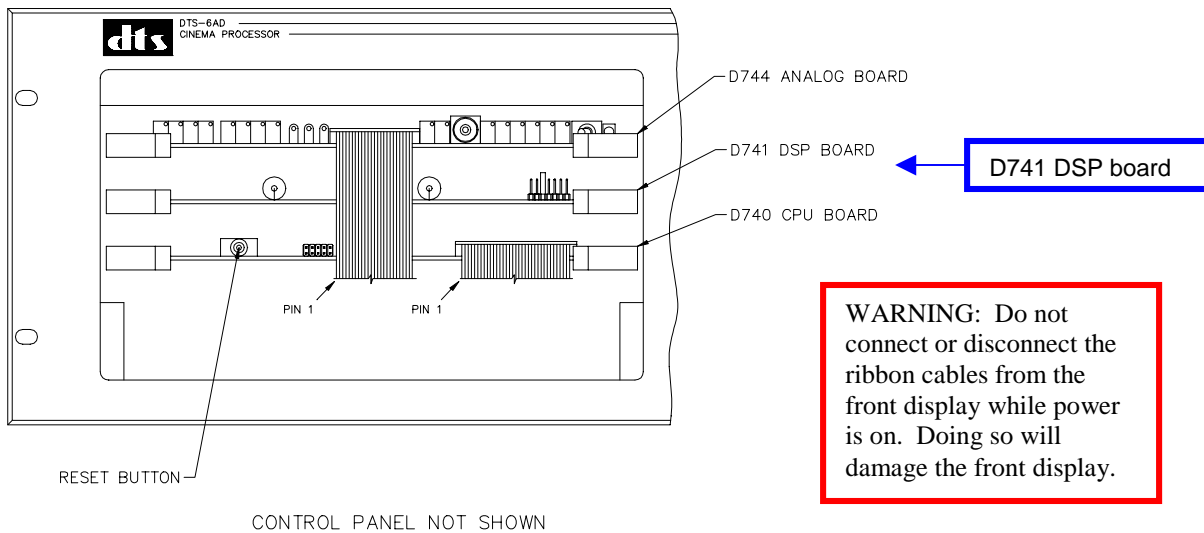

3. Be sure the new D741 board sits level in the side rails and is pushed all the back until it connects securely in place. Reconnect the cables to the front display.
4. Once the new D741 board is installed, power on the DTS cinema processor and verify that the unit boots up correctly.
5. Reinstall the front display and use as normal. Return the problem D741 board to DTS\*  
 \*If you do not have a return authorization (RA) contact DTS Customer Service first. Have ready the serial number of the cinema processor that the D741 board came from so that we can issue you a RA.

**Refer questions to DTS Customer Service Technical Support**

Tel: (818) 706-3525

Fax: (818) 879-2746

Email: cinematech@dtsonline.com