

Film-Tech

The information contained in this Adobe Acrobat pdf file is provided at your own risk and good judgment.

These manuals are designed to facilitate the exchange of information related to cinema projection and film handling, with no warranties nor obligations from the authors, for qualified field service engineers.

If you are not a qualified technician, please make no adjustments to anything you may read about in these Adobe manual downloads.

www.film-tech.com



RCA PARTS AND ACCESSORIES

THEATRE PROJECTOR AND LAMP PARTS (Brenkert Type)

CROSS REFERENCE GUIDE

FROM OLD PART NUMBERS TO NEW RCA STOCK NUMBERS WHICH WOLK WILL MAINTAIN

IMPORTANT: This cross reference provides a means for determining the new RCA stock numbers currently used to replace old part numbers having alphabetical prefixes. To expedite the servicing of your orders ALWAYS USE THE NEW RCA STOCK NUMBER and description as shown in the following listings. Parts that are not furnished separately are so indicated by "NFS" in the description column.

Table with 3 columns: OLD PART NUMBER, NEW RCA STOCK NUMBER, DESCRIPTION. It lists various mechanical parts like studs, rollers, gears, and shafts with their corresponding stock numbers and descriptions.



RCA PARTS AND ACCESSORIES

Table with 3 main columns: Old Part Number, New RCA Stock Number, and Description. It lists various mechanical parts like screws, washers, springs, gears, and rollers with their respective part and stock numbers.



RCA PARTS AND ACCESSORIES

Table with 4 columns: OLD PART NUMBER, NEW RCA STOCK NUMBER, DESCRIPTION, and a corresponding set of columns for a second set of parts. The table lists various components like screws, washers, nuts, and electrical parts with their respective part numbers and descriptions.



RCA PARTS AND ACCESSORIES

OLD PART NUMBER	NEW RCA STOCK NUMBER	DESCRIPTION	OLD PART NUMBER	NEW RCA STOCK NUMBER	DESCRIPTION	OLD PART NUMBER	NEW RCA STOCK NUMBER	DESCRIPTION
X1012	200755	BAFFLE, VENTILATION	X1225	200944	PLATE	X1613	201657	COVER NFS AVAILABLE ONLY WITH 201111 COVER ASSEM X3808A
X1016	200757	PLATE, INS. WITH INTERLUVE	X1228A	200945	DISTRIBUTOR			
X1017	200759	NUT, SLANG IN HOIT	X1231	200948	SCREW			
X1020	200762	LINK, DOOR STOP	X1236	200949	CLIP	X1613A	201658	COVER NFS AVAILABLE ONLY WITH 201111 COVER ASSEM X3808A
X1020A	200763	LINK	X1237	200950	DISTRIBUTOR			
			X1238A	200951	HUB NFS AVAILABLE ONLY WITH 201071 GEAR ASSEM X3201A	X1614	201659	GASKET
X1021	200765	HINGE, DOOR				X1615	201660	GLASS, OIL GAUGE
X1022	200767	CLIP, RETAINING, GEAR RETENTION				X1616A	201661	SPACER
X1024	200770	CLIP, RETAINING	X1239	200953	STRIPPER	X1617	201662	GASKET, COVER SEAL, OIL GAUGE
X1025	200772	GLASS, FILM DOOR	X1240	200954	SPRING			
X1026	200774	GLASS, GREEN, QUARTER PANEL	X1245	200957	ROLLER			
X1027	200776	LENS, GEAR COVER	X1401	200993	CASTING			
X1028	200778	HANDLE, FILM STOP AXIS	X1402	200994	CASTING	X1619A	201663	AVAILABLE ONLY WITH 201106 X 3800A GEAR AND SHAFT ASSEM
X1029	200780	SCREW, SHOULDER, DOOR STOP	X1403A	200995	GEAR NFS AVAILABLE ONLY WITH 201092 GEAR ASSEM X3603A	X1621A	201664	SCREEN, OIL FILTER
X1030	200782	PLUG, OIL FACE BEAR BEARING				X1622	201665	HOSE, OIL FEED
X1032	200785	GASKET, FRAMING HANDLE				X1623	201666	OIL TUBE, LOWER
X1035	200789	GASKET, OIL SEAL	X1403B	200996	GEAR NFS AVAILABLE ONLY WITH 201094 GEAR ASSEM X3603C	X1624	201667	OIL TUBE, UPPER
X1036	200791	GASKET, GEAR COVER				X1625	201668	GASKET, OIL PUMP TO MAIN FRAME
						X1702	201669	GEAR NFS AVAILABLE ONLY WITH 201119 GEAR ASSEM X3906 DR. SIDE FACE IDEAL
X1038	200793	CUSHION	X1404	200997	GEAR	X1703	201670	GEAR NFS AVAILABLE ONLY WITH 201118 GEAR ASSEM X3905 MAIN DRIVE EXTERNAL
X1051	200799	WINDOW	X1404A	200998	GEAR	X1704	201671	GEAR, MAIN DRIVE INTERNAL
X1052A	200801	GLASS	X1405A	200999	GEAR	X1705	201672	SHAFT, MAIN DRIVE
X1053A	200803	GLASS USE 95971	X1405B	201873	GEAR	X1706	201673	BEARING NFS AVAILABLE ONLY WITH 201122 BEARING ASSEM X3912
X1054	200804	COVER	X1406A	201607	GEAR	X1707A	201674	BEARING
X1055	200806	DOOR	X1407E	201608	WASHER	X1709	201675	BUSHING NFS AVAILABLE ONLY WITH 201116 GEAR ASSEM X3902
X1056	200807	COVER	X1408A	201609	WASHER	X1711A	201676	GEAR NFS AVAILABLE ONLY WITH 201116 GEAR ASSEM X3902
X1058	200809	NUT, QUARTER PANEL STUD	X1410A	201610	COLLAR	X1711AR	201677	GEAR NFS AVAILABLE ONLY WITH 201116 GEAR ASSEM X3902
X1059	200811	BOLT	X1413A	201611	AVAILABLE ONLY WITH 201092 X 3603A OR 201094 X 3603C GEAR AND SHAFT ASSEM	X1712	201678	SHAFT
X1061	200814	GASKET				X1713A	201679	AVAILABLE ONLY WITH 201114 X 3900A GEAR ASSY
X1062	200815	HINGE				X1713B	201680	GEAR NFS AVAILABLE ONLY WITH 201114 GEAR ASSEM X3900A
X1063	200817	GASKET				X1714A	201681	GEAR NFS AVAILABLE ONLY WITH 201114 GEAR ASSEM X3900A
X1064	200819	BRACKET	X1415B	201612	COLLAR	X1715A	201682	SHAFT
X1101B	200842	SHAFT NFS AVAILABLE ONLY WITH 201067 CAM AND SHAFT ASSEM X3110C	X1418	201613	FLANGE	X1716A	201683	BUSHING NFS AVAILABLE ONLY WITH 201114 GEAR ASSEM X3900A
X1102	200845	GEAR NFS AVAILABLE ONLY WITH 201994 GEAR ASSEM X3104 INTERMITTENT GEAR, LARGE	X1419	201614	SLINGER	X1717A	201684	SHAFT
			X1420	201615	FLANGE	X1718A	201685	GEAR NFS AVAILABLE ONLY WITH 201115 GEAR ASSEM X3901A
X11030	200847	GEAR, CAM SHAFT	X1421	201616	FLANGE	X1719A	201686	GEAR
X1114B	200854	FRAME, INTERMITTENT MAIN	X1424	201617	BUSHING	X1720A	201687	AVAILABLE ONLY WITH 201115 X 3901A GEAR ASSY
X1117	200856	BUSHING NFS AVAILABLE ONLY WITH 201994 GEAR ASSEM X3104 INTERMITTENT GEAR, BUSHING, LARGE	X1428B	201618	COLLAR	X1721	201688	NUT
			X1429	201619	SCREW			
X1125B	200858	WASHER	X1431B	201620	COLLAR	X1722	201689	NUT
X1127	200860	COVER, INTERMITTENT OIL AX	X1432	201621	YOKE	X1723	201690	HOUSING
X1128A	200861	FLYWHEEL, INTERMITTENT	X1433B	201622	SHAFT	X1726	201692	SLEEVE
X1129	200862	OIL BOX	X1434	201623	RETAINER	X1727	201694	GEAR BLANK USE 201116 GEAR X3902
X1130C	200863	CAM NFS AVAILABLE ONLY WITH 201067 CAM AND SHAFT ASSEM X3110C	X1437	201624	SHAFT	X1729	201695	PIN, SAFETY SHEAR
			X1447	201625	GASKET	X1730	201696	ARM
X1131B	200864	STAR NFS AVAILABLE ONLY WITH 201998 STAR AND SHAFT ASSEM X3108B	X1448	201626	GASKET	X1731	201697	WASHER
			X1450A	201627	BLADE, SHUTTER, INNER	X1732	201698	KEY
X1135A	200865	SCREW, COVER SLIDE KEY	X1450B	201628	BLADE, SHUTTER, OUTER	X1734	201699	PIN, FRAMING ARM SLIDE
X1140A	200866	FRAME	X1450C	201629	BLADE, SINGLE SHUTTER	X1735A	201700	SHROUD NFS AVAILABLE ONLY WITH 201114 GEAR ASSEM X3900A
			X1450D	201630	BLADE			
X1141	200867	USE 202192 SPROCKET, INTERMITTENT	X1450E	201631	BLADE	X1740	201701	BUSHING NFS AVAILABLE ONLY WITH 201119 GEAR ASSEM X3906
X1142	200869	LINK, VERTICAL FRAMING ARM	X1450F	201632	BLADE			
X1150	200870	KNOB, FRAMING	X1450G	201633	BLADE	X1742	201702	WASHER
X1158	200873	SHAFT, FRAMING HANDLE	X1450H	201634	BLADE	X1743	201703	WASHER
X1169A	200877	ARM NFS AVAILABLE ONLY WITH 201083 ARM ASSEM X3401	X1450J	201635	BLADE	X1751	201704	GASKET
						X1752	201705	WASHER
X1170	200878	LINK, HORIZ. FRAMING	X1456	201636	KEY	X1753	201706	PIN
X1173	200881	NUT	X1501	201638	FAH, GAGE	X1754	201707	SCREW
X1175	200882	CHAIN, FRAMING	X1504	201639	PIN NFS AVAILABLE ONLY WITH 201104 WEIGHT ASSEM X3705	X1755	201708	PLUG
X1176	200883	SPROCKET, SMALL FRAMING	X1510	201640	WASHER	X1756	201709	TUBE NFS AVAILABLE ONLY WITH 201124 OIL TUBE ASSEM X3914
X1180	200885	WASHER	X1512A	201641	CASTING			
			X1514	201642	HEAD	X1759	201710	PIN, SPECIAL TAPE
X1181	200886	GASKET	X1515A	201643	SHAFT	X1801	201712	HOUSING
X1185A	200887	SCREW, FRAMING SWIVEL	X1518	201644	SHAFT	X1802A	201714	SLEEVE DISCONTINUED
X1194A	200892	SPROCKET, LARGE FRAMING	X1519	201645	SLEEVE NFS AVAILABLE ONLY WITH 201104 WEIGHT ASSEM X3705	X1806A	201715	SHAFT
X1197	200894	WASHER, FRAMING SHAFT				X1807	201716	CAM
X1198	200895	GASKET, FRAMING + OIL SHAFT	X1520	201646	LEVER NFS AVAILABLE ONLY WITH 201104 WEIGHT ASSEM X3705	X1808	201717	SPRING, LENS CAM
X1203	200919	USE 202194 PLATE AND SCREWS	X1522	201647	ROD NFS AVAILABLE ONLY WITH 201101 ROD ASSEM X3702	X1809A	201718	KNOB
X1204A	200920	COLLAR				X1811	201719	SHAFT
X1206A	200921	GEAR NFS AVAILABLE ONLY WITH 201071 GEAR ASSEM X3201A	X1523	201648	BUTTON NFS AVAILABLE ONLY WITH 201101 ROD ASSEM X3702	X1812	201720	PIN
			X1527	201649	BEARING NFS AVAILABLE ONLY WITH 201100 SHAFT ASSEM X3701	X1815	201721	LEVER
X1207	200923	SPROCKET NFS AVAILABLE ONLY WITH 202191 SPROCKET ASSEM OVER SPROCKET				X1816A	201722	SHAFT
X1208	200925	HOUSING				X1818	201723	COLLAR
X1210	200926	COLLING	X1533	201650	SPRING			
X1214	200927	BRACKET	X1603A	201651	GEAR NFS AVAILABLE ONLY WITH 201106 GEAR ASSEM X3800A			
X1215	200929	BRACKET				X1604	201652	GEAR NFS AVAILABLE ONLY WITH 201107 GEAR ASSEM X3801A
X1216	200931	SHAFT				X1606A	201653	BUSHING NFS AVAILABLE ONLY WITH 201110 BODY ASSEM X3807A
X1217	200932	STUD				X1607B	201654	CASTING NFS AVAILABLE ONLY WITH 201110 BODY OIL PUMP ASSEM X3807A
X1218	200934	NUT NFS AVAILABLE ONLY WITH 201075 SHAFT AND NUT ASSEM X3206	X1607C	201655	SPACER			
X1219	200935	STRIPPER, FILM	X1608	201656	COVER			
X1220	200937	STRIPPER						
X1221	200939	SPRING						
X1222	200940	ROLLER						
X1223	200941	SHAFT						
X1224	200942	SHAFT NFS AVAILABLE ONLY WITH 201075 SHAFT AND NUT ASSEM X3206						



RCA PARTS AND ACCESSORIES

Table with 8 columns: OLD PART NUMBER, NEW RCA STOCK NUMBER, DESCRIPTION, OLD PART NUMBER, NEW RCA STOCK NUMBER, DESCRIPTION, OLD PART NUMBER, NEW RCA STOCK NUMBER, DESCRIPTION. It lists various mechanical parts and assemblies with their respective part numbers and descriptions.



RCA PARTS AND ACCESSORIES

Table with 9 columns: OLD PART NUMBER, NEW RCA STOCK NUMBER, DESCRIPTION, OLD PART NUMBER, NEW RCA STOCK NUMBER, DESCRIPTION, OLD PART NUMBER, NEW RCA STOCK NUMBER, DESCRIPTION. Contains various mechanical parts like gears, shafts, and housings.