

# Fil m-Tech

The information contained in this Adobe Acrobat pdf file is provided at your own risk and good judgment.

These manual s are designed to facil itate the exchange of information rel ated to cinema projection and fil m handl ing, with no warranties nor obligations from the authors, for qual ified fiel d service engineers.

If you are not a qual ified technician, pl ease make no adjuatments to anything you may read about in these Adobe manual downl oads

[www.fil m-tech.com](http://www.fil m-tech.com)

# CAPIO CA21 Spare Relays

11-Aug-03

Spare Relay 1 (physical relay 17) Connections:	
Relay contact	Connector and pin
R17 (normally open/closed contact)	Bevan Board TB5 pin 50
R17 (common)	Bevan Board TB5 pin 49

Note that relay 17 can be either set to “normally open” or “normally closed” by jumper “J4 USER RELAY 17” inside the CA21.

Spare Relay 2 (physical relay 27) Connections:	
Relay contact	Connector and pin
R27 (normally open contact)	CP4 Pin 1 (see diagram below for CP4 location)
R27 (normally closed contact)	CP4 Pin 7
R27 (common)	CP4 Pin 6

Spare Relay 3 (physical relay 39) Connections:	
Relay contact	Connector and pin
R39 (normally open contact)	GP4 Pin 14 (see diagram below for GP4 location)
R39 (normally closed contact)	GP4 Pin 2
R39 (common)	GP4 Pin 1

Spare Relay 4 (physical relay 40) Connections:	
Relay contact	Connector and pin
R40 (normally open contact)	GP4 Pin 16 (see diagram below for GP4 location)
R40 (normally closed contact)	GP4 Pin 4
R40 (common)	GP4 Pin 3

**Note that all relays are rated 1 Amp at 24V**

## CA21 Back Panel Connectors:

