

FILM-TECH

THE INFORMATION CONTAINED IN THIS ADOBE ACROBAT PDF FILE IS PROVIDED AT YOUR OWN RISK AND GOOD JUDGMENT.

THESE MANUALS ARE DESIGNED TO FACILITATE THE EXCHANGE OF INFORMATION RELATED TO CINEMA PROJECTION AND FILM HANDLING, WITH NO WARRANTIES NOR OBLIGATIONS FROM THE AUTHORS, FOR QUALIFIED FIELD SERVICE ENGINEERS.

IF YOU ARE NOT A QUALIFIED TECHNICIAN, PLEASE MAKE NO ADJUSTMENTS TO ANYTHING YOU MAY READ ABOUT IN THESE ADOBE MANUAL DOWNLOADS.

WWW.FILM-TECH.COM

NOW AVAILABLE

16
70
35

INSTRUCTIONS FOR USING SIGNO MARKER

SIGNO MARKER consists of a cast aluminum template and a hardened steel scribe. The template may be held in the hand or screwed to the rewind table.

For the 35mm Marker

With any frame line even with the left hand edge of the marker, drop the nearest sprocket hole over the steady pin, push the film back against the guide and press down on it, so that it will not slip. Then insert the scribe into each of the four holes, press down and turn the knurled knob one or two revolutions to the right. Only a light pressure is necessary. The center or fifth hole is provided to hold the scribe out of the way when inserting the film or when the marker is not in use. Do not turn scribe in template without film in place, this will score the spot and make a poor circle thereafter.

For the 16mm Marker

The procedure is the same except that any sprocket hole may be dropped over the steady pin. This places a circle on every other frame.

For the 70mm Marker

The procedure is the same as the 35mm except that only three circles are used. An additional hole or holes may be scribed by moving film up another frame or frames.

— Save Carton to Return Scribe for Resharpener —

ORDER A SPARE SCRIBER

MANUFACTURED BY

CLINT PHARE PRODUCTS

282 EAST 214th STREET

EUCLID (Cleveland), OHIO 44123